

8 Digits Calculator with Punctuation and Special Function (SET,C1,C2) LSI

C9718

GENERAL DESCRIPTION

C9718 is a CMOS LSI calculator chip with 8 digits arithmetic operations, one accumulating memory and one special memory which can retain the content after power off, two country currency exchange(C1, C2) and exchange rate setting(SET), percentage and extraction-of-square-root calculations, designed for triplex LCD application with either 1.5V battery or solar cell power supply.

FUNCTIONS

- Two country currency exchange(C1, C2).
- Currency exchange rate setting(SET).
- Four standard functions (+, -, ×, ÷).
- Auto-constant calculations (constant : multiplicand, divisor, addend and subtrahend).
- Mark-up and mark-down calculations.
- Extraction of square root.
- Percentage calculations.
- Chain multiplication and division.

FUNCTIONAL DESCRIPTION

a. Floating point system

- i) 8 digits floating decimal point system, with leading zero suppression, Zero shift.
- ii) Symbols : '-' Negative number indicator.
: 'E' Error status indicator.
: 'M' Non-zero memory indicator.
: ',' Punctuation comma.
: 'SET' Exchange rate setting indicator.
: 'C1', 'C2' Country currency indicator.

b. Error Detections

- i) System errors occur when :
 - The integral part of any calculation result exceeds 8 digits.
 - The integral part of any memory calculation result exceeds 8 digits.
 - The integral part of any addend or subtrahend to memory exceed 8 digits.
 - The integral part of a mark-up or mark-down calculation result exceeds 8 digits.
 - The division by zero.
 - The extraction of square root of a negative number.
- ii) Rough estimate calculation error

APPLICATION

This specification contains complete informations of functional operations, electrical characteristics, packaging, and crating requirements of C9718.

FEATURES

- Accumulating memory : M+, M-, RM, CM, MRC
- Special memory which can retain the content after power off.
- Floating decimal.
- Overflow indication : E.
- Automatic power off function.
- Punctuation comma display.

- The integral part of the result of any standard functions, percentage, square, reciprocal or power calculations exceeds 8 digits

c. Error Indication

i) System error

'0' is indicated in the 1-digit position and 'E' in the sign indicator position.

ii) Rough estimate calculation error

The high-order 8 digits of a calculation result is indicated together with 'E'. The decimal point is indicated in the position corresponding to a calculation result times 10^{-8} , and no zero shift is performed.

d. Error Release

i) System error can be released by the ON/C key.

ii) Rough estimate calculation error can be released by the ON/C, CE key.

e. Number Entry

Numerical can be entered up to 8 digits, entries that equal to 9 digits or more will be ignored.

f. Memory Protection


The memory contents before any error detection are protected.

g. Memory Indication

If the memory contents is non-zero, 'M' is indicated in the memory indicator position.

h. Double Key Depression

The order of priority when two keys are being depressed simultaneously is as follows :

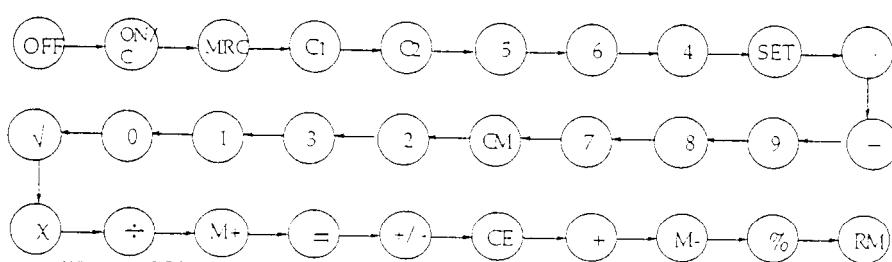

i. Key bounce protection

i) Front edge : down to 1 word and up to about 3 words.

ii) Trailing edge : 9 words. (1 word is 3.3ms when display frequency is $F_d=100Hz$.)

j. Auto Power Off

Power automatically turns off after 9 - 11 minutes pass from the last key press, but the power supply for special memory will still be on unless the battery is removed.

k. Clear Operation

All operations except memory content are cleared by ON/C key.

l. Exchange Rate Setting

The exchange rate can be set and put in special memory by pressing "SET" key after numerical entries, the content in special memory may not be changed until another number is set in. The content (exchange rate) is retained even when power off.

The "SET" icon will show up when pressing "SET" key after numerical entries and will not disappear until any other key pressed.

m. Currency exchange

Numerical entries ended with "C1" will display the result of the entered number multiplying the exchange rate which has been set and put in special memory.

Numerical entries ended with "C2" will display the result of the entered number dividing the exchange rate which has been set and put in special memory.

n. Exchange Rate Display

Pressing "1" and "C1" will display the exchange rate which has been put in special memory.

ABSOLUTE MAXIMUM RATINGS

| Parameters | Symbol | Value | Unit | Note |
|-----------------------------|-----------|------------------|------|------|
| Extremely voltage | VDD | -0.3 ~ +2.0 | V | 1 |
| | VIN | -0.3 ~ VDD + 0.3 | V | 1 |
| Solar Supply Voltage | VSB | 1.1 ~ 3.0 | V | 2 |
| | VGG (LIM) | 1.1 ~ 1.8 | V | 3 |
| Operating temperature range | TOPR | 0 ~ +50 | °C | -- |
| Storage temperature range | TSTG | -55 ~ +125 | °C | -- |

Note 1 : Maximum voltage on any pin is referenced to GND.

Note 2 : VSB is solar supply voltage.

Note 3 : VGG (lim) is limited voltage.

ELECTRICAL CHARACTERISTICS

(Ta = 25°C, VDD = 1.5V unless otherwise specified)

| Parameter | Symbol | Min. | Typ. | Max. | Unit | Test Condition | Note |
|---------------------|--------|----------|------|------|------|---------------------------------|------|
| Input Voltage | VIH | VDD-0.4 | -- | -- | V | -- | 4 |
| | VIL | -- | -- | 0.4 | V | -- | |
| Input Current | IIH | -- | -- | 1 | μA | VIN = VDD | 5 |
| | IIL | 0.3 | 1 | 3 | μA | VIN = 0V | |
| Output Voltage 1 | VOH | VDD-0.15 | -- | -- | V | No load | 6 |
| | VOI | -- | -- | 0.15 | V | IOUT = 15μA | |
| Output Voltage 2 | VOA | 2.8 | 2.95 | -- | V | No load | 7 |
| | VOB | 1.3 | 1.5 | 1.7 | V | No load | |
| | VOC | -- | 0 | 0.2 | V | No load | |
| Display Frequency | Fd | 40 | 55 | 65 | Hz | VDD = 1.3V while display is ON. | 7 |
| Dissipation Current | IOFF | -- | -- | 0.1 | μA | Display is OFF | 8 |
| | IDIS | -- | 4.2 | 6 | μA | VDD = 1.3V while display is on. | 9 |
| | ICP | -- | 6.8 | -- | μA | VDD = 1.1V, while operation. | 10 |


Note 4 : Applies to Pins K2 ~ K6.

Note 5 : Applies to Pins K2 ~ K6.

Note 6 : Applies to P1, P2, A2X ~ A5X.

Note 7 : Applies to H1 ~ H3, A1 ~ A8, B1 ~ B8, C1 ~ C8.


Note 8 : Measured by the test circuit below after power supply automatically turns off.

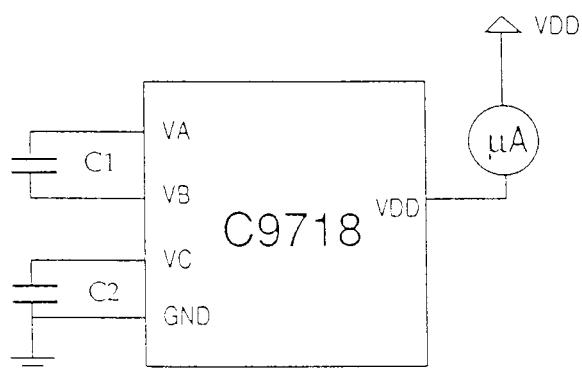

Note 9 : Measured by the test circuit while "0" is being displayed after auto - clear operation and while key is not being depressed.


Note 10 : Measured by the test circuit while operation is being made by ON/C key and while key is not being depressed.

LCD BACKPLANE OUTPUT WAVEFORM

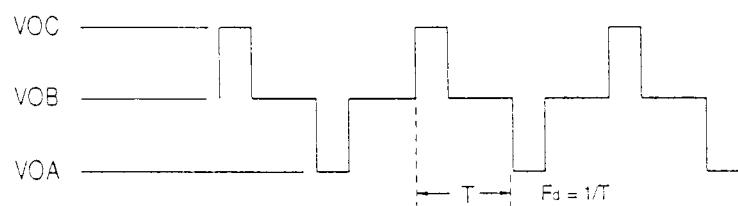

DISPLAY FONTS


a. Numerical Font

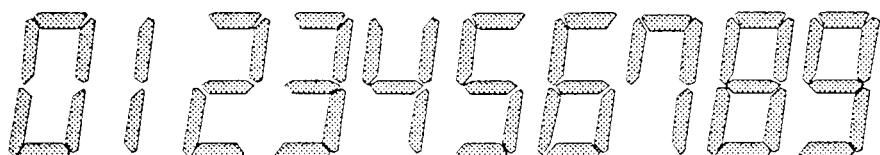


b. Sign Font




LCD CONNECTOR

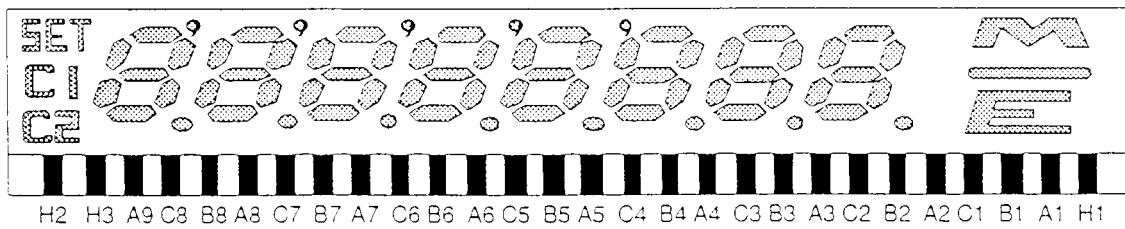

LCD Panel

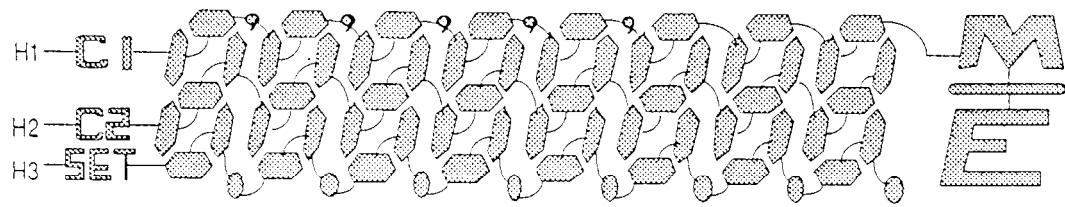

Backplanes Connection

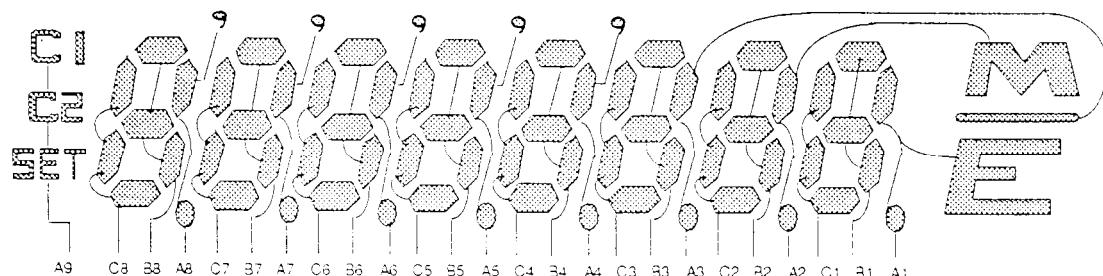



Segment Connection

PIN DESCRIPTION

| Pin No. | Signal | I/O | Description |
|---------|--------|-----|-----------------|
| 1 | VSB | I | Solary Battery |
| 2 | Vop | I | Option Pin |
| 3 | VDD | | Power supply. |
| 4 | H1 | O | Display output. |
| 5 | A1 | O | Display output. |
| 6 | B1 | O | Display output. |
| 7 | GND | | Ground. |
| 8 | C1 | O | Display output. |
| 9 | A2 | O | Display output. |
| 10 | B2 | O | Display output. |
| 11 | C2 | O | Display output. |
| 12 | A3 | O | Display output. |
| 13 | B3 | O | Display output. |
| 14 | C3 | O | Display output. |
| 15 | A4 | O | Display output. |
| 16 | B4 | O | Display output. |
| 17 | C4 | O | Display output. |
| 18 | A5 | O | Display output. |
| 19 | B5 | O | Display output. |
| 20 | C5 | O | Display output. |
| 21 | A6 | O | Display output. |
| 22 | B6 | O | Display output. |
| 23 | C6 | O | Display output. |
| 24 | A7 | O | Display output. |


| Pin No. | Signal | I/O | Description |
|---------|--------|-----|-----------------------------------|
| 25 | B7 | O | Display output. |
| 26 | C7 | O | Display output. |
| 27 | A8 | O | Display output. |
| 28 | B8 | O | Display output. |
| 29 | C8 | O | Display output. |
| 30 | A9 | O | Display output. |
| 31 | H2 | O | Display output. |
| 32 | H3 | O | Display output. |
| 33 | GND | | Ground. |
| 34 | VC | O | Cap terminal for voltage step-up. |
| 35 | VA | O | Cap terminal for voltage step-up. |
| 36 | VB | O | Cap terminal for voltage step-up. |
| 37 | CGin | I | Input terminal for CG. |
| 38 | K3 | I | Key input. |
| 39 | K2 | I | Key input. |
| 40 | A2X | O | Strobe output. |
| 41 | A3X | O | Strobe output. |
| 42 | A4X | O | Strobe output. |
| 43 | A5X | O | Strobe output. |
| 44 | P2 | O | Strobe output. |
| 45 | P1 | O | Strobe output. |
| 46 | K5 | I | Key input. |
| 47 | K6 | I | Key input. |
| 48 | K4 | I | Key input. |

PAD DIAGRAM

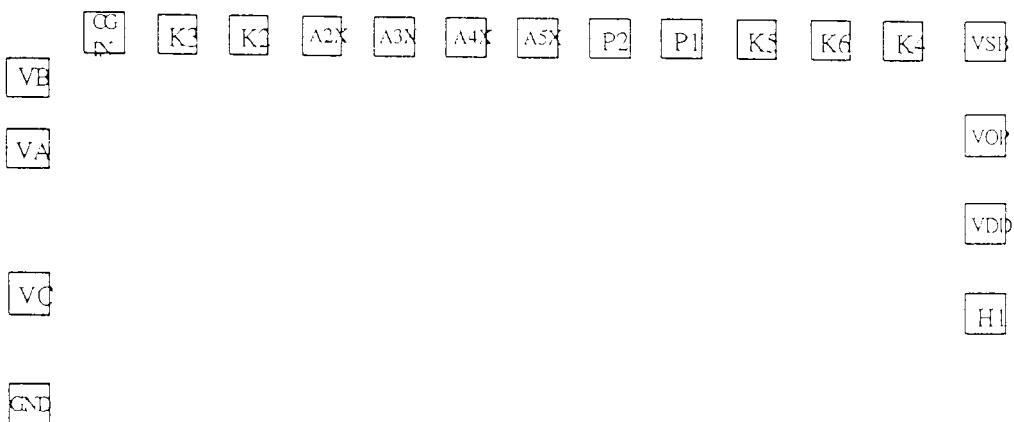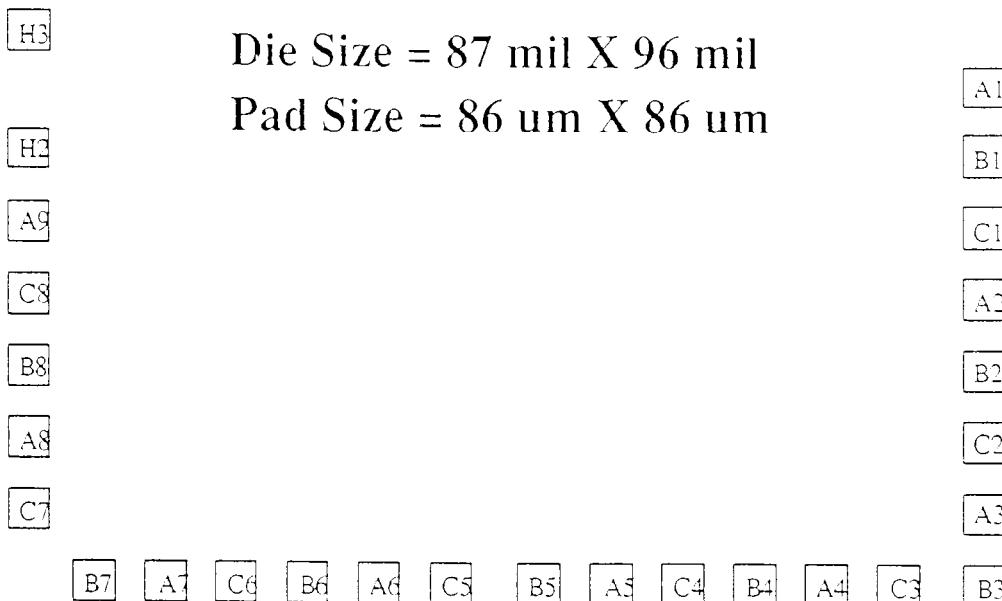C9718The Co-ordinate For Low Left Corner of Each Pad


| | | | |
|---------------------|--------------------|----------------------|----------------------|
| B7(-885.5, -1127.8) | A3 (932.0, -981.7) | K4 (-766.0, 1043.7) | VB (-1016.9, 949.3) |
| A7(-739.3, -1127.8) | C2 (932.0, -835.3) | K6 (618.6, 1043.7) | VA (-1016.9, 803.0) |
| C6(-593.3, -1127.8) | B2 (932.0, -689.0) | K5 (471.1, 1043.8) | VC (-1016.8, 508.4) |
| B6(-447.2, -1127.8) | A2 (932.0, -542.6) | P1 (317.8, 1043.8) | GND(-1016.9, 279.6) |
| A6(-301.1, -1127.8) | C1 (932.0, -396.4) | P2 (170.8, 1043.8) | H3 (-1016.9, -5.6) |
| C5(-154.8, -1127.8) | B1 (932.0, -250.3) | A5X (-23.8, 1043.8) | H2 (-1019.0, -245.8) |
| B5(-24.1, -1127.8) | A1 (932.0, 105.4) | A4X (-123.1, 1043.7) | A9 (-1019.0, -393.9) |
| A5(170.4, -1127.8) | H1 (935.0, 486.8) | A3X (-270.2, 1043.7) | C8 (-1019.0, -541.9) |
| C4(316.7, -1127.8) | VDD(935.0, 670.1) | A2X (-417.2, 1043.8) | B8 (-1019.0, -688.0) |
| B4(463.1, -1127.8) | VOP(935.0, 845.3) | K2 (-567.3, 1043.7) | A8 (-1019.0, -834.3) |
| A4(609.3, -1127.8) | VSB(935.1, 1043.9) | K3 (-714.2, 1043.7) | C7 (-1019.0, -980.4) |
| C3(755.7, -1127.8) | | CGIN(-861.3, 1043.7) | |
| B3(932.0, -1127.8) | | | |

APPLICATION DIAGRAM WITH SOLAR CELL SUPPLY

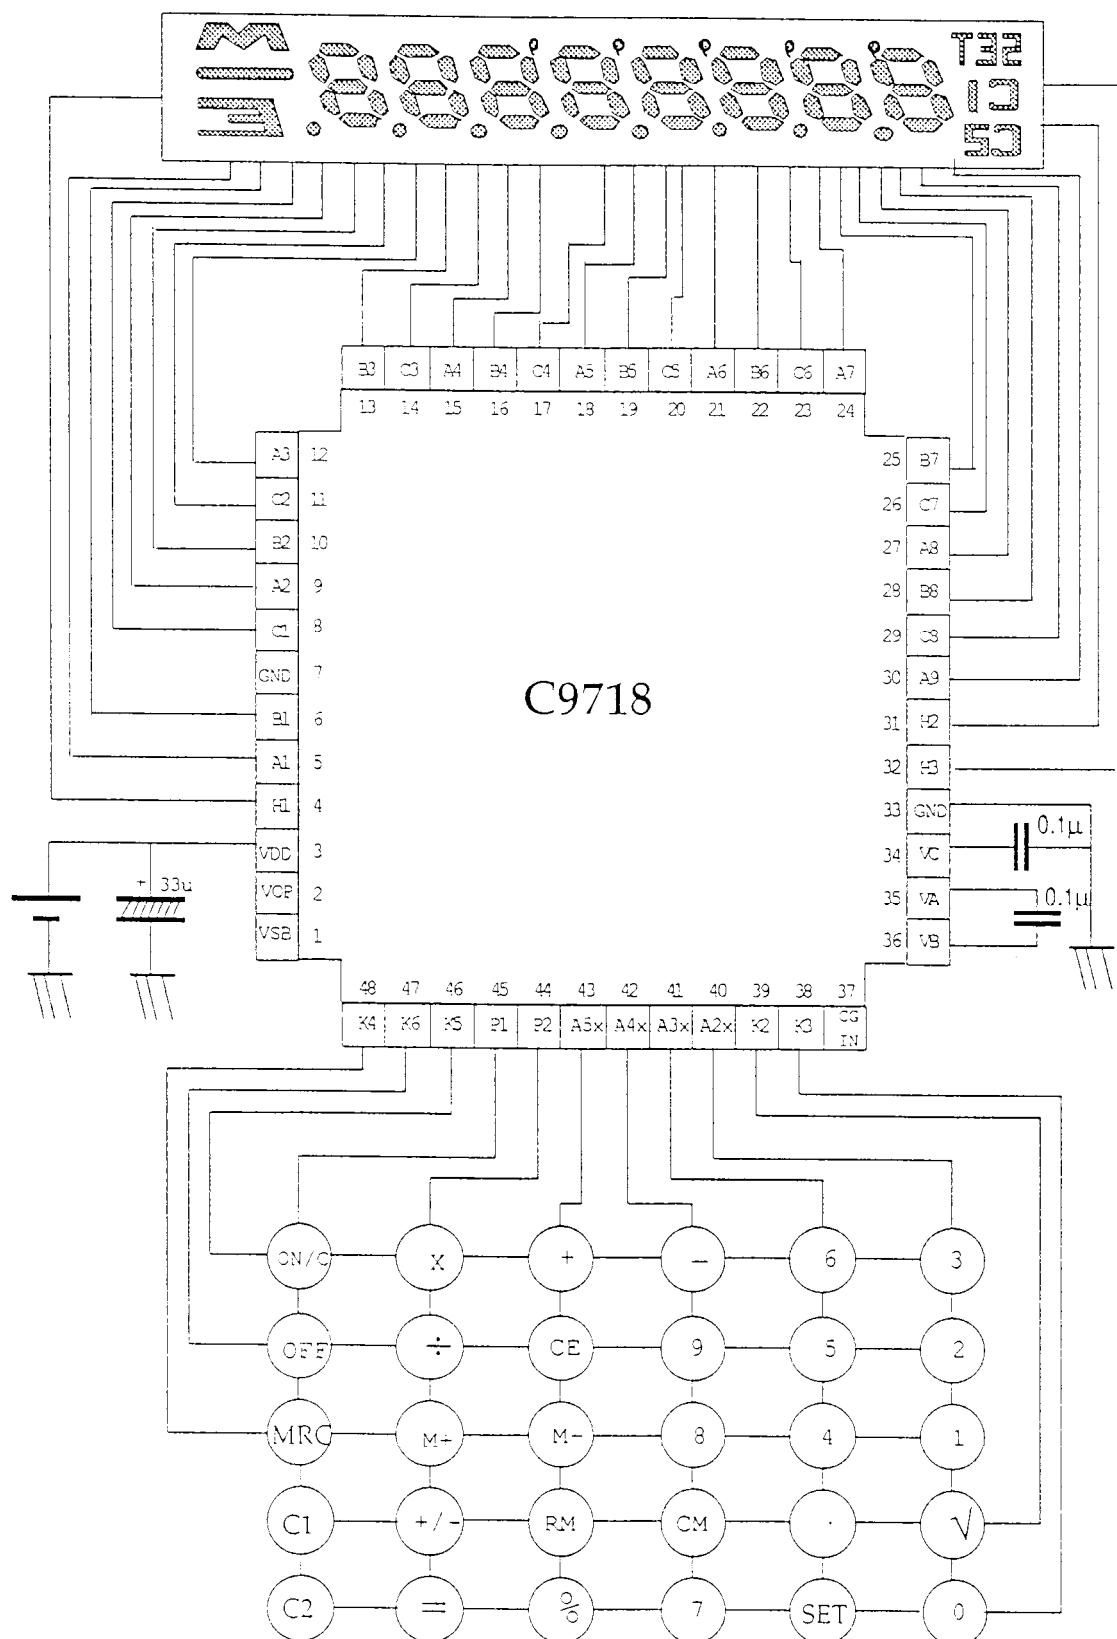

Note : Chip substrate must be floating or connected to GND.

APPLICATION DIAGRAM WITH BATTERY SUPPLY

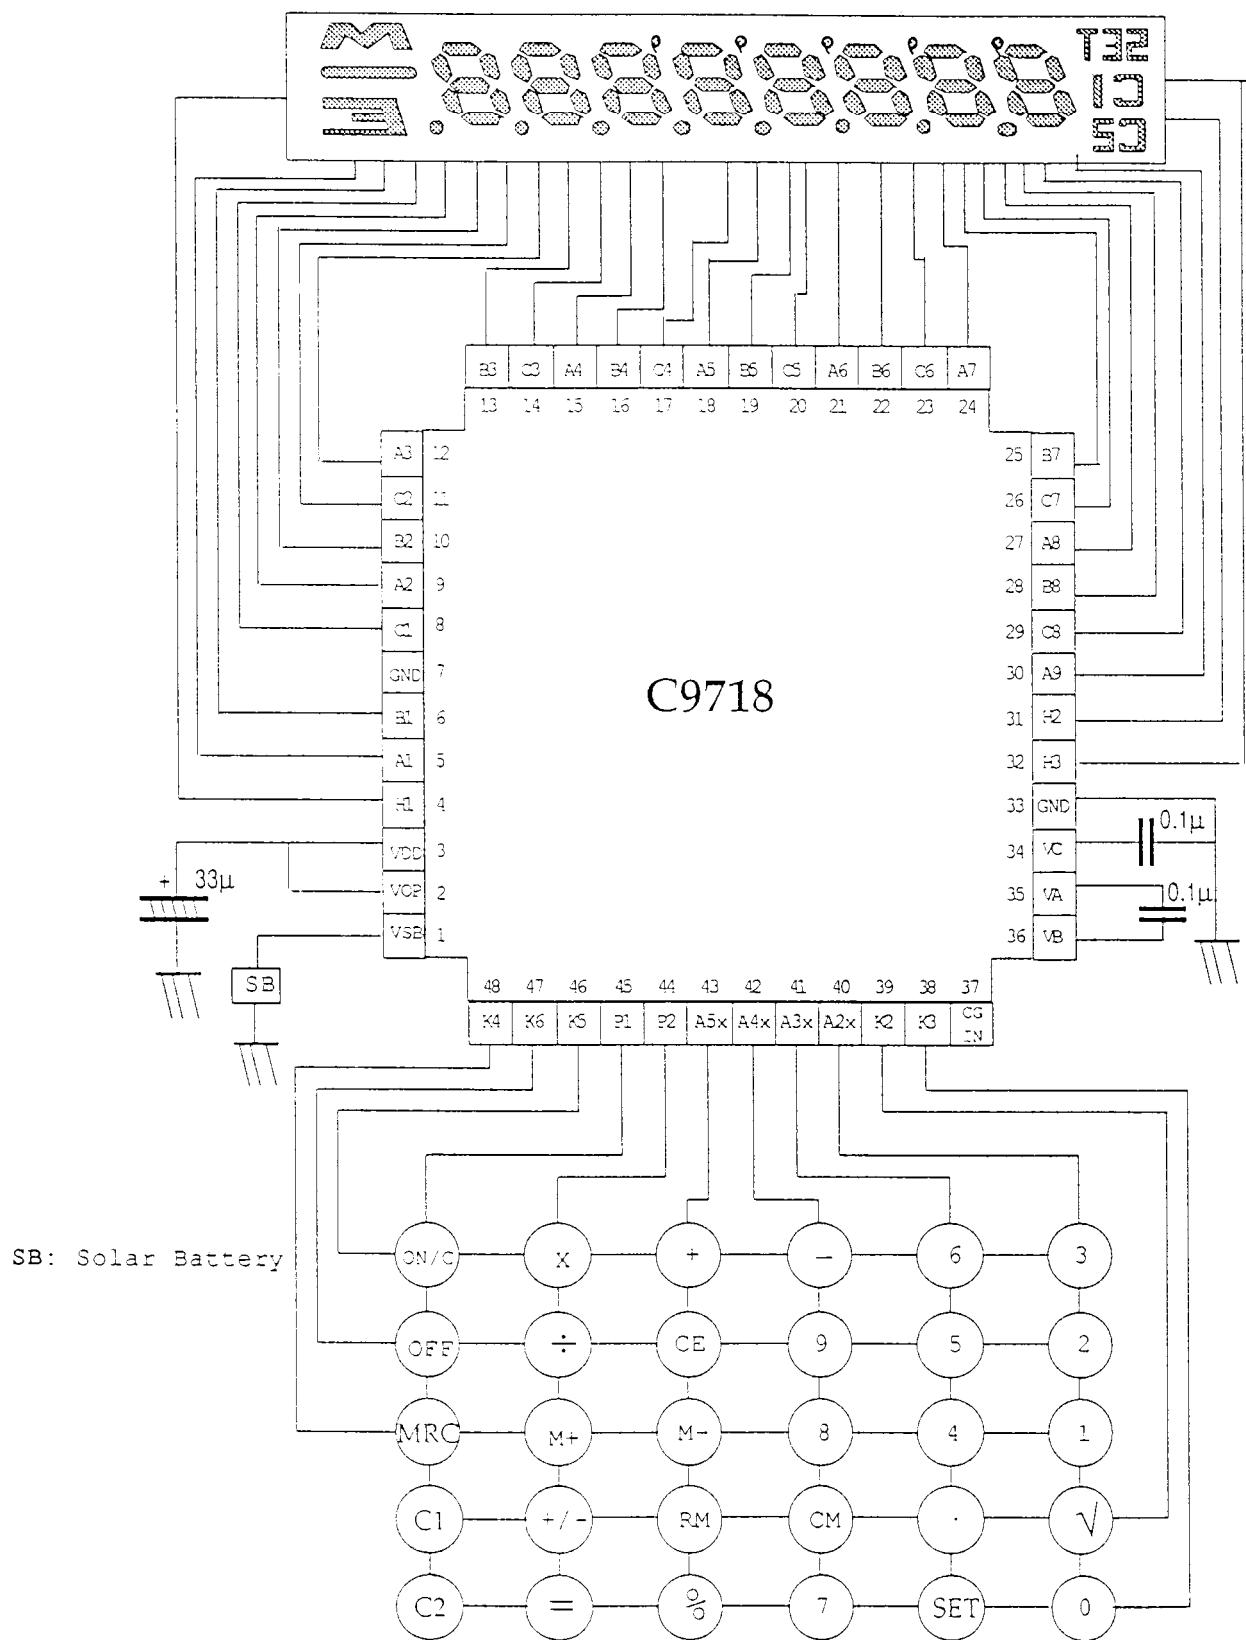

Note : Chip substrate must be floating or connected to GND.